

***YAESU***  
***The radio***

***FTDX101MP***  
***FTDX101D***

**CAT Operation Reference Manual**

**YAESU MUSEN CO., LTD.**

# CAT (Computer Aided Transceiver) Operation

## Overview

The CAT (Computer Aided Transceiver) System in the **FTDX101MP/FTDX101D** transceiver provides control of frequency, VFO, memory, and other settings such as dual-channel memories and diversity reception using an external personal computer. This allows multiple control operations to be fully automated with single mouse clicks, or keystroke operations on the computer keyboard.


### Using the USB Cable

The **FTDX101MP/FTDX101D** transceiver has a built-in USB to Dual UART Bridge, allowing direct connection from the rear-panel USB jack to the USB jack of a computer without the need for an interface device, simply use a USB cable to connect to the USB jack on the computer.



To connect to a PC using a USB cable, a Virtual COM port driver must be installed on the PC. Visit the Yaesu website <http://www.yaesu.com/> to download the Virtual COM port driver and Installation Manual.


YAESU MUSEN does not produce CAT System operating software due to the wide variety of personal computers and operating systems in use today. However, the information provided in this chapter explains the serial data structure and opcodes used by the CAT system. This information, along with the short programming examples, is intended to help you start writing programs on your own. As you become more familiar with CAT operation, you can customize programs for your operating needs and utilize the full operating potential of this system.

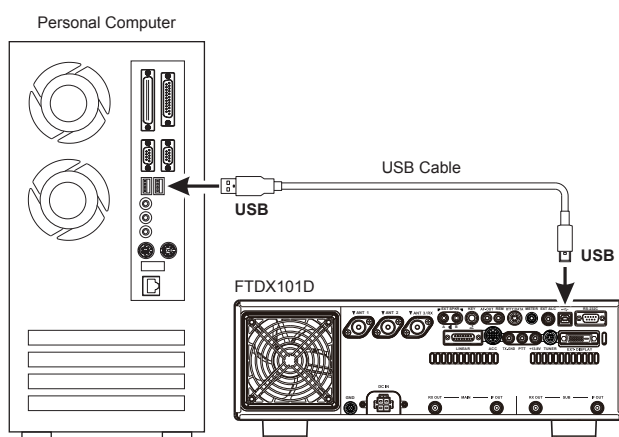

### How to Confirm the Installation, and the COM Port Number

After the FTD101MP/FTDX101D and computer are connected, confirm that the virtual COM driver has been installed successfully:

1. Press and hold the ON/OFF switch to turn the transceiver ON.
2. Connect the transceiver and PC with a commercially available USB cable (A-B).
3. Open the "Device Manager" screen in Windows.
4. On the Device Manager screen, double-click "Port (COM & LPT)".

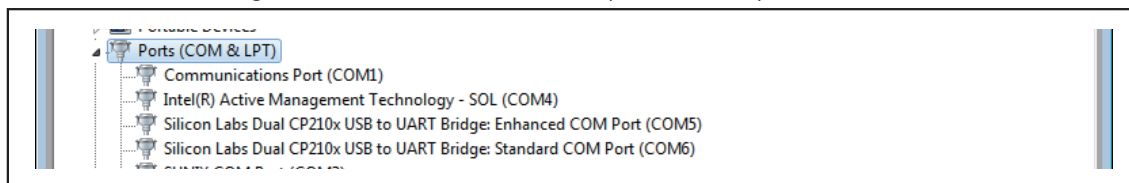

"Silicon Labs Dual CP210x USB to UART Bridge : Enhanced COM Port (COM\*\*)"

"Silicon Labs Dual CP210x USB to UART Bridge : Standard COM Port (COM\*\*)"

\*(The number in the "(COM\*\*)" portion may vary from computer to computer.)

The FTD101MP/FTDX101D contains two virtual COM ports, an Enhanced COM Port and a Standard COM Port. These ports offer the following functions:

- **Enhanced COM Port:** CAT Communications (Frequency and Communication Mode Settings)
- **Standard COM Port:** TX Controls (PTT control, CW Keying, Digital Mode Operation)

The above example indicates that COM5 can be used for CAT communications and firmware updating, while COM6 can be used for TX control (PTT, CW Keying, Digital Mode Operation).

# CAT (Computer Aided Transceiver) Operation

When performing software port configuration, select the COM port numbers that were confirmed using the procedure above, use the two confirmed COM port numbers for each software function. The frequency and communication mode and PTT control can be set from the software, and CW keying, digital communication, etc. can be performed simultaneously.

When performing software port configuration, select the COM port numbers that were confirmed using the procedure above.



- If a “!” or “X” is displayed for the port on the Device Manager, uninstall and reinstall the virtual COM driver.
- If a transceiver with a different serial number is connected and turned on, different COM port numbers will be assigned to it, making it possible to perform individual COM port configurations for separate transceivers.
- When using the USB cable for TX control, the transceiver may switch to the transmit mode when the computer is started.
- Always close the application on the computer before disconnecting the USB cable.

## Using the RS-232C Cable




When using an RS-232C cable, the “PS” command (POWER SWITCH) is not available. Therefore, the transceiver cannot be turned ON with the CAT command.


The **FTDX101MP/FTDX101D** transceiver has a built-in level converter, allowing direct connection from the rear-panel RS-232C jack to the serial port of your computer without the need of any external boxes.

When using the RS-232C cable, set Menu item [OPERATION SETTING] → [GENERAL] → [TUNER/232C SELECT] to “RS232C”.

You will need a serial cable for connection to the RS-232C (serial or COM port) connector on your computer. Purchase a **standard serial cable** (not the so-called “null modem” type), ensuring it has the correct gender and number of pins (some serial COM port connectors use a 9-pin rather than 25-pin configuration). If your computer uses a custom connector, you may have to construct the cable. In this case, refer to the technical documentation supplied with your computer for correct data connection.

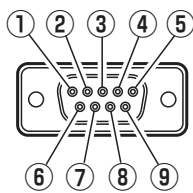

Pin No.	Pin Name	I/O	Function
①	N/A	---	---
②	SERIAL OUT	Output	Outputs the Serial Data from the transceiver to the computer.
③	SERIAL IN	Input	Inputs the Serial Data from the computer to the transceiver.
④	N/A	---	---
⑤	GND	---	Signal Ground
⑥	N/A	---	---
⑦	RTS	---	---
⑧	CTS	---	---
⑨	N/A	---	---

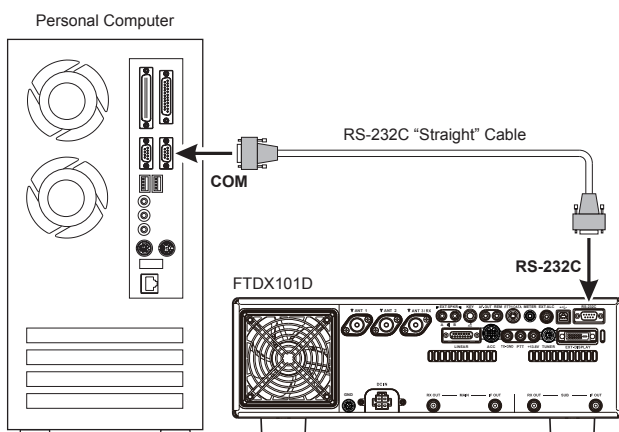

# CAT (Computer Aided Transceiver) Operation

---

## Control Command

---

A computer control command is composed of an alphabetical command, various parameters, and the terminator that signals the end of the control command.

**Example:** Set the MAIN Band frequency to 14.250000 MHz.

**FA**            **014250000** ;  
↑                ↑                ↑  
Command    Parameter   Terminator

There are three commands for the **FTDX101MP/FTDX101D** as shown below:

**Set** command: Set a particular condition            (to the **FTDX101MP/FTDX101D**)  
**Read** command: Reads an answer                    (from the **FTDX101MP/FTDX101D**)  
**Answer** command: Transmits a condition            (from the **FTDX101MP/FTDX101D**)

For example, note the following case of the FA command (Set the MAIN Band frequency):

- To set the MAIN Band frequency to 14.250000 MHz, the following command is sent from the computer to the transceiver:  
    **"FA014250000;"** (Set command)
- To read the MAIN Band frequency, the following command is sent from the computer to the transceiver:  
    **"FA;"** (Read command)
- When the Read command above has been sent, the following command is returned to the computer:  
    **"FA014250000;"** (Answer command)

### Alphabetical Commands

A command consists of 2 alphabetical characters.

You may use either lower or upper case characters. The commands available for this transceiver are listed in the "PC Control Command Tables" on the following pages.

### Parameters

Parameters are used to specify information necessary to implement the desired command.

The parameters to be used for each command are predetermined. The number of digits assigned to each parameter is also predetermined. Refer to the "Control Command List" and the "Control Command Tables" to configure the appropriate parameters.

When configuring parameters, be careful not to make the following mistakes.

**For example,**

when the correct parameter is **"IS00+1000"** (IF SHIFT):

**IS001000;**  
    Not enough parameters specified (No direction (+) given for the IF shift)

**IS00+100;**  
    Not enough digits (Only three frequency digits given)

**IS00\_+\_1000;**  
    Unnecessary characters between parameters

**IS00+10000;**  
    Too many digits (Five frequency digits given)

**Note:** If a particular parameter is not applicable to the **FTDX101MP/FTDX101D**, the parameter digits should be filled using any character except the ASCII control codes (00 to 1Fh) and the terminator (;).

### Terminator

To signal the end of a command, it is necessary to use a semicolon (;). The digit where this special character must appear differs depending on the command used.

# CAT (Computer Aided Transceiver) Operation

Command	Function	Set	Read	Ans.	AI
AB	MAIN BAND TO SUB BAND	0	X	X	X
AC	ANTENNA TUNER CONTROL	0	0	0	0
AG	AF GAIN	0	0	0	0
AI	AUTO INFORMATION	0	0	0	X
AM	MAIN BAND TO MEMORY CHANNEL	0	X	X	X
AN	ANTENNA NUMBER	0	0	0	0
AO	AMC OUTPUT LEVEL	0	0	0	0
AV	ANTI VOX LEVEL	0	0	0	0
BA	SUB BAND TO MAIN BAND	0	X	X	X
BC	AUTO NOTCH	0	0	0	0
BD	BAND DOWN	0	X	X	X
BI	BREAK-IN	0	0	0	0
BM	SUB BAND TO MEMORY CHANNEL	0	X	X	X
BP	MANUAL NOTCH	0	0	0	0
BS	BAND SELECT	0	X	X	X
BU	BAND UP	0	X	X	X
BY	BUSY	X	0	0	0
CH	CHANNEL UP/DOWN	0	X	X	X
CN	CTCSS/DCS NUMBER	0	0	0	0
CO	CONTOUR	0	0	0	0
CS	CW SPOT	0	0	0	0
CT	CTCSS	0	0	0	0
DA	DIMMER	0	0	0	X
DN	DOWN	0	X	X	X
DT	DATE AND TIME	0	0	0	X
ED	ENCODER DOWN	0	X	X	X
EM	ENCODE MEMORY	0	0	0	X
EN	ENCODE	0	X	X	X
EU	ENCODER UP	0	X	X	X
EX	MENU	0	0	0	0
FA	FREQUENCY MAIN BAND	0	0	0	0
FB	FREQUENCY SUB BAND	0	0	0	0
FN	FINE TUNING	0	0	0	0
FR	FUNCTION RX	0	0	0	0
FS	FAST STEP	0	0	0	0
FT	FUNCTION TX	0	0	0	0
GT	AGC FUNCTION	0	0	0	0
ID	IDENTIFICATION	X	0	0	X
IF	INFORMATION	X	0	0	0
IS	IF-SHIFT	0	0	0	0
KM	KEYER MEMORY	0	0	0	X
KP	KEY PITCH	0	0	0	0
KR	KEYER	0	0	0	0
KS	KEY SPEED	0	0	0	0
KY	CW KEYING	0	X	X	X
LK	LOCK	0	0	0	0
LM	LOAD MESSAGE	0	0	0	X
MA	MEMORY CHANNEL TO MAIN BAND	0	X	X	X
MB	MEMORY CHANNEL TO SUB BAND	0	X	X	X
MC	MEMORY CHANNEL	0	0	0	X
MD	MODE	0	0	0	0
MG	MIC GAIN	0	0	0	0
ML	MONITOR LEVEL	0	0	0	0
MR	MEMORY READ	X	0	0	X
MS	METER SW	0	0	0	0
MT	MEMORY CHANNEL WRITE/TAG	0	0	0	X
MW	MEMORY WRITE	0	X	X	X
MX	MOX SET	0	0	0	0

Command	Function	Set	Read	Ans.	AI
NA	NARROW	0	0	0	0
NB	NOISE BLANKER	0	0	0	0
NL	NOISE BLANKER LEVEL	0	0	0	0
NR	NOISE REDUCTION	0	0	0	0
OI	OPPOSITE BAND INFORMATION	X	0	0	0
OS	OFFSET (Repeater Shift)	0	0	0	0
PA	PRE-AMP (IPO)	0	0	0	0
PB	PLAY BACK	0	0	0	X
PC	POWER CONTROL	0	0	0	0
PL	SPEECH PROCESSOR LEVEL	0	0	0	0
PR	SPEECH PROCESSOR	0	0	0	0
PS	POWER SWITCH	0	0	0	X
QI	QMB STORE	0	X	X	X
QR	QMB RECALL	0	X	X	X
QS	QUICK SPLIT	0	X	X	X
RA	RF ATTENUATOR	0	0	0	0
RC	CLAR CLEAR	0	X	X	X
RD	CLAR DOWN	0	X	X	X
RF	ROOFING FILTER	0	0	0	0
RG	RF GAIN	0	0	0	0
RI	RADIO INFORMATION	X	0	0	0
RL	NOISE REDUCTION LEVEL	0	0	0	0
RM	READ METER	X	0	0	0
RS	RADIO STATUS	X	0	0	0
RT	CLAR	0	0	0	0
RU	CLAR UP	0	X	X	X
SC	SCAN	0	0	0	0
SD	SEMI BREAK-IN DELAY TIME	0	0	0	0
SF	SUB DIAL	0	0	0	0
SH	WIDTH	0	0	0	0
SM	S METER	X	0	0	X
SQ	SQUELCH LEVEL	0	0	0	0
ST	SPLIT	0	0	0	0
SS	SPECTRUM SCOPE	0	0	0	0
SV	SWAP VFO	0	X	X	X
SY	SYNC	0	0	0	0
TX	TX SET	0	0	0	0
UL	UNLOCK	X	0	0	0
UP	UP	0	X	X	X
VD	VOX DELAY TIME	0	0	0	0
VG	VOX GAIN	0	0	0	0
VM	[V/M] KEY FUNCTION	0	X	X	X
VS	VFO SELECT	0	0	0	0
VT	VCT(VC TUNE)	0	0	0	0
VX	VOX	0	0	0	0
XT	TX CLAR	0	0	0	0
ZI	ZERO IN	0	X	X	X

# CAT (Computer Aided Transceiver) Operation

AB	MAIN BAND TO SUB BAND										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>B</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>B</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>B</b>	;								

AC	ANTENNA TUNER CONTROL										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Fixed      P3 0: Tuner "OFF" P2 0: Fixed      1: Tuner "ON" 2: Tuning Start / Tuning Stop
	<b>A</b>	<b>C</b>	P1	P2	P3	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>C</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>C</b>	P1	P2	P3	;					

AG	AF GAIN										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND P2 000 - 255
	<b>A</b>	<b>G</b>	P1	P2	P2	P2	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>G</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>G</b>	P1	P2	P2	P2	;				

AI	AUTO INFORMATION										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Auto Information "OFF" 1: Auto Information "ON"  <b>NOTE:</b> The AI command is available only when PC is connected with USB cable.  This parameter is set to "0" (OFF) automatically when the transceiver is turned "OFF".
	<b>A</b>	<b>I</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>I</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>I</b>	P1	;							

AM	MAIN BAND TO MEMORY CHANNEL										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>M</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>M</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>M</b>	;								

AN	ANTENNA NUMBER										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND P2 1: ANT1 2: ANT2 3: ANT3 P4 0: Fixed
	<b>A</b>	<b>N</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>N</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>N</b>	P1	P2	P4	;					

AO	AMC OUTPUT LEVEL										
Set	1	2	3	4	5	6	7	8	9	10	P1 001-100: AMC OUTPUT LEVEL
	<b>A</b>	<b>O</b>	P1	P1	P1	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>O</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>O</b>	P1	P1	P1	;					

AV	ANTI VOX LEVEL										
Set	1	2	3	4	5	6	7	8	9	10	P1 001-100: ANTI VOX LEVEL
	<b>A</b>	<b>V</b>	P1	P1	P1	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>V</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>A</b>	<b>V</b>	P1	P1	P1	;					

# CAT (Computer Aided Transceiver) Operation

<b>BA</b>		<b>SUB BAND TO MAIN BAND</b>									
Set	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>A</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>BC</b>		<b>AUTO NOTCH</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND P2 0: Auto Notch "OFF" 1: Auto Notch "ON"
	<b>B</b>	<b>C</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>C</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>C</b>	P1	P2	;						

<b>BD</b>		<b>BAND DOWN</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND
	<b>B</b>	<b>D</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>BI</b>		<b>BREAK-IN</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Break-in "OFF" 1: Break-in "ON"
	<b>B</b>	<b>I</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>I</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>I</b>	P1	;							

<b>BM</b>		<b>SUB BAND TO MEMORY CHANNEL</b>									
Set	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>M</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>BP</b>		<b>MANUAL NOTCH</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND P2 0: Manual NOTCH "ON/OFF" 1: Manual NOTCH LEVEL P3 P2=0 000: "OFF" 001: "ON" P2=1 001 - 320 (NOTCH Frequency : x 10 Hz )
	<b>B</b>	<b>P</b>	P1	P2	P3	P3	P3	;			
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>P</b>	P1	P2	;						
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>P</b>	P1	P2	P3	P3	P3	;			

<b>BS</b>		<b>BAND SELECT</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 00: 1.8 MHz      06: 18 MHz      12: MW 01: 3.5 MHz      07: 21 MHz      13: - 02: 5 MHz      08: 24.5 MHz      14: - 03: 7 MHz      09: 28 MHz      15: - 04: 10 MHz      10: 50 MHz      16: - 05: 14 MHz      11: GEN      17: 70 MHz
	<b>B</b>	<b>S</b>	P1	P1	;						
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>BU</b>		<b>BAND UP</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND
	<b>B</b>	<b>U</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

# CAT (Computer Aided Transceiver) Operation

<b>BY</b>		<b>BUSY</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND RX BUSY "OFF" 1: MAIN BAND RX BUSY "ON" P2 0: SUB BAND RX BUSY "OFF" 1: SUB BAND RX BUSY "ON"
Read	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>Y</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>B</b>	<b>Y</b>	P1	P2	;						

<b>CH</b>		<b>CHANNEL UP/DOWN</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Memory Channel "UP" 1: Memory Channel "DOWN"
		<b>C</b>	<b>H</b>	P1	;						
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>CN</b>		<b>CTCSS TONE FREQUENCY</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND P2 0: CTCSS P3 000 - 049: Tone Frequency Number (See Table 1)
		<b>C</b>	<b>N</b>	P1	P2	P3	P3	;			
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>N</b>	P1	P2	;						
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>N</b>	P1	P2	P3	P3	P3	;			

000	67.0 Hz	009	91.5 Hz	018	123.0 Hz	027	162.2 Hz	036	189.9 Hz	045	229.1 Hz
001	69.3 Hz	010	94.8 Hz	019	127.3 Hz	028	165.5 Hz	037	192.8 Hz	046	233.6 Hz
002	71.9 Hz	011	97.4 Hz	020	131.8 Hz	029	167.9 Hz	038	196.6 Hz	047	241.8 Hz
003	74.4 Hz	012	100.0 Hz	021	136.5 Hz	030	171.3 Hz	039	199.5 Hz	048	250.3 Hz
004	77.0 Hz	013	103.5 Hz	022	141.3 Hz	031	173.8 Hz	040	203.5 Hz	049	254.1 Hz
005	79.7 Hz	014	107.2 Hz	023	146.2 Hz	032	177.3 Hz	041	206.5 Hz	-	-
006	82.5 Hz	015	110.9 Hz	024	151.4 Hz	033	179.9 Hz	042	210.7 Hz	-	-
007	85.4 Hz	016	114.8 Hz	025	156.7 Hz	034	183.5 Hz	043	218.1 Hz	-	-
008	88.5 Hz	017	118.8 Hz	026	159.8 Hz	035	186.2 Hz	044	225.7 Hz	-	-

<b>CO</b>		<b>CONTOUR</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND P2 0: CONTOUR "ON/OFF" 1: CONTOUR FREQ 2: APF "ON/OFF" 3: APF FREQ P3 P2=0 0000: CONTOUR "OFF" 0001: CONTOUR "ON" P2=1 0010 - 3200 (CONTOUR Frequency:10 - 3200Hz) P2=2 0000: APF "OFF" 0001: APF "ON" P2=3 0000 - 0050 (APF Frequency: -250 - 250 Hz )
		<b>C</b>	<b>O</b>	P1	P2	P3	P3	P3	;		
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>O</b>	P1	P2	;						
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>O</b>	P1	P2	P3	P3	P3	P3	;		

<b>CS</b>		<b>CW SPOT</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: OFF 1: ON
		<b>C</b>	<b>S</b>	P1	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>S</b>	P1	;							

<b>CT</b>		<b>CTCSS</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN BAND 1: SUB BAND P2 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC
		<b>C</b>	<b>T</b>	P1	P2	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>T</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>C</b>	<b>T</b>	P1	P2	;						

<b>DA</b>		<b>DIMMER</b>										
Set	1	2	3	4	5	6	7	8	9	10	11	P1 00: Fixed P2 00: Fixed P3 00 - 20: TFT Display Brightness Level P4 00 - 20: LED Indicators Brightness Level
		<b>D</b>	<b>A</b>	P1	P1	P2	P2	P3	P3	P4	P4	
Read	1	2	3	4	5	6	7	8	9	10	11	
	<b>D</b>	<b>A</b>	;									
Answer	1	2	3	4	5	6	7	8	9	10	11	
	<b>D</b>	<b>A</b>	P1	P1	P2	P2	P3	P3	P4	P4	;	



# CAT (Computer Aided Transceiver) Operation

<b>DN</b>		<b>MIC DOWN</b>									
Set	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>N</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>DT</b>		<b>DATE AND TIME</b>									
Set	1	2	3	4	5	6	7	~	n-1	n	P1 0: Date 1: Time (UTC) P2 P1=0    yyyyymmdd (Year/Month/Date) P1=1    hhmmss (Hour/Minute/Second, 24 hour time system)
	<b>D</b>	<b>T</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	~	<b>P2</b>	;	
Read	1	2	3	4	5	6	7	8	9	10	
	<b>D</b>	<b>T</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	~	n-1	n	
	<b>D</b>	<b>T</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	<b>P2</b>	~	<b>P2</b>	;	

<b>ED</b>		<b>ENCODER DOWN</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN ENCODER                      5: MAIN CONT ENCODER 1: MPVD knob                            6: SUB NOTCH ENCODER 2: MIC/SPEED ENCODER                7: SUB CONT ENCODER 3: PROC/PITCH ENCODER               8: MULTI knob 4: MAIN NOTCH ENCODER P2 01 - 99: Frequency Steps (Frequency only)
	<b>E</b>	<b>D</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>EM</b>		<b>ENCODE MEMORY</b>									
Set	1	2	3	4	5	6	7		54	55	P1 0: RTTY 1: DATA P2 0: -                      3: 3 ch 1: 1 ch                      4: 4 ch 2: 2 ch                      5: 5 ch P3 Message Characters (up to 50 characters) (ASCII)
	<b>E</b>	<b>M</b>	<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	<b>P3</b>	~	<b>P3</b>	;	
Read	1	2	3	4	5	6	7		54	55	
	<b>E</b>	<b>M</b>	<b>P1</b>	<b>P2</b>	;						
Answer	1	2	3	4	5	6	7		54	55	
	<b>E</b>	<b>M</b>	<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	<b>P3</b>	~	<b>P3</b>	;	

<b>EN</b>		<b>ENCODE</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: RTTY 1: DATA P2 0: -                      3: 3 ch 1: 1 ch                      4: 4 ch 2: 2 ch                      5: 5 ch
	<b>E</b>	<b>N</b>	<b>P1</b>	<b>P2</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>EU</b>		<b>ENCODER UP</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN ENCODER                      5: MAIN CONT ENCODER 1: MPVD knob                            6: SUB NOTCH ENCODER 2: MIC/SPEED ENCODER                7: SUB CONT ENCODER 3: PROC/PITCH ENCODER               8: MULTI knob 4: MAIN NOTCH ENCODER P2 01 - 99: Frequency Steps (Frequency only)
	<b>E</b>	<b>U</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>EX</b>		<b>MENU</b>											
Set	1	2	3	4	5	6	7	8	9		nn	**	P1 : 01 - 05 P2 : 01 - 07 P3 : 01 - 23 P4 : Parameter (See Table 2)
	<b>E</b>	<b>X</b>	<b>P1</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	<b>P4</b>	~	<b>P4</b>	;	
Read	1	2	3	4	5	6	7	8	9	10	nn	**	
	<b>E</b>	<b>X</b>	<b>P1</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	;				
Answer	1	2	3	4	5	6	7	8	9		nn	**	
	<b>E</b>	<b>X</b>	<b>P1</b>	<b>P1</b>	<b>P2</b>	<b>P2</b>	<b>P3</b>	<b>P3</b>	<b>P4</b>	~	<b>P4</b>	;	

# CAT (Computer Aided Transceiver) Operation

Table 2 (MENU Chart)					
P1	P2	P3	Function	P4	Digits
01 (MODE SSB)		01	AGC FAST DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		02	AGC MID DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		03	AGC SLOW DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		04	LCUT FREQ	00: OFF 01: 100 Hz ~ 19: 1000 Hz (50 Hz steps)	2
		05	LCUT SLOP	0: 6 dB/oct 1: 18 dB/oct	1
		06	HCUT FREQ	00: OFF 01: 700 Hz ~ 67: 4000 Hz (50 Hz steps)	2
		07	HCUT SLOPE	0: 6 dB/oct 1: 18 dB/oct	1
		08	SSB OUT SELECT	0: MAIN 1: SUB	1
		09	SSB OUT LEVEL	0 ~ 100 (P4 = 000 ~ 100)	3
		10	TX BPF SEL	0: 50 ~ 3050 1: 100 ~ 2900 2: 200 ~ 2800 3: 300 ~ 2700 4: 400 ~ 2600	1
		11	SSB MOD SOURCE	0: MIC 1: REAR	1
		12	REAR SELECT	0: DATA 1: USB	1
		13	RPORT GAIN	0 ~ 100 (P4 = 000 ~ 100)	3
		14	RPTT SELECT	0: DAKY 1: RTS 2: DTR	1
		02 (MODE AM)		01	AGC FAST DELAY
02	AGC MID DELAY			20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
03	AGC SLOW DELAY			20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
04	LCUT FREQ			00: OFF 01: 100 Hz ~ 19: 1000 Hz (50 Hz steps)	2
05	LCUT SLOP			0: 6 dB/oct 1: 18 dB/oct	1
06	HCUT FREQ			00: OFF 01: 700 Hz ~ 67: 4000 Hz (50 Hz steps)	2
07	HCUT SLOPE			0: 6 dB/oct 1: 18 dB/oct	1
08	AM OUT SELECT			0: MAIN 1: SUB	1
09	AM OUT LEVEL			0 ~ 100 (P4 = 000 ~ 100)	3
10	TX BPF SEL			0: 50 ~ 3050 1: 100 ~ 2900 2: 200 ~ 2800 3: 300 ~ 2700 4: 400 ~ 2600	1
11	AM MOD SOURCE			0: MIC 1: REAR	1
12	MIC GAIN			1000: MCVR 0000 ~ 0100: FIX	4
13	REAR SELECT			0: DATA 1: USB	1
14	RPORT GAIN			0 ~ 100 (P4 = 000 ~ 100)	3
15	RPTT SELECT			0: DAKY 1: RTS 2: DTR	1
03 (MODE FM)		01	AGC FAST DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		02	AGC MID DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		03	AGC SLOW DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		04	LCUT FREQ	00: OFF 01: 100 Hz ~ 19: 1000 Hz (50 Hz steps)	2
		05	LCUT SLOP	0: 6 dB/oct 1: 18 dB/oct	1
		06	HCUT FREQ	00: OFF 01: 700 Hz ~ 67: 4000 Hz (50 Hz steps)	2
		07	HCUT SLOPE	0: 6 dB/oct 1: 18 dB/oct	1
		08	FM OUT SELECT	0: MAIN 1: SUB	1
		09	FM OUT LEVEL	0 ~ 100 (P4 = 000 ~ 100)	3
		10	FM MOD SOURCE	0: MIC 1: REAR	1
		11	MIC GAIN	1000: MCVR 0000 ~ 0100: FIX	4
		12	REAR SELECT	0: DATA 1: USB	1
		13	RPORT GAIN	0 ~ 100 (P4 = 000 ~ 100)	3
		14	RPTT SELECT	0: DAKY 1: RTS 2: DTR	1
		15	RPT SHIFT(28MHz)	0 ~ 1000 kHz (P4 = 0000 ~ 1000, 10 kHz/step)	4
		16	RPT SHIFT(50MHz)	0 ~ 4000 kHz (P4 = 0000 ~ 4000, 10 kHz/step)	4
04 (MODE PSK/DATA)		01	AGC FAST DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		02	AGC MID DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		03	AGC SLOW DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		04	PSK TONE	0: 1000Hz 1: 1500Hz 2: 2000Hz	1
		05	DATA SHIFT (SSB)	0 ~ 3000 Hz (P4 = 0000 ~ 3000, 10 Hz steps)	4
		06	LCUT FREQ	00: OFF 01: 100 Hz ~ 19: 1000 Hz (50 Hz steps)	2
		07	LCUT SLOP	0: 6 dB/oct 1: 18 dB/oct	1
		08	HCUT FREQ	00: OFF 01: 700 Hz ~ 67: 4000 Hz (50 Hz steps)	2
		09	HCUT SLOPE	0: 6 dB/oct 1: 18 dB/oct	1
		10	DATA OUT SELECT	0: MAIN 1: SUB	1
		11	DATA OUT LEVEL	0 ~ 100 (P4 = 000 ~ 100)	3
		12	TX BPF SEL	0: 50 ~ 3050 1: 100 ~ 2900 2: 200 ~ 2800 3: 300 ~ 2700 4: 400 ~ 2600	1
		13	DATA MOD SOURCE	0: MIC 1: REAR	1
		14	REAR SELECT	0: DATA 1: USB	1
		15	RPORT GAIN	0 ~ 100 (P4 = 000 ~ 100)	3
		16	RPTT SELECT	0: DAKY 1: RTS 2: DTR	1
05 (MODE RTTY)		01	AGC FAST DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		02	AGC MID DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		03	AGC SLOW DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4
		04	POLARITY-RX	0: NOR 1: REV	1
		05	POLARITY-TX	0: NOR 1: REV	1
		06	LCUT FREQ	00: OFF 01: 100 Hz ~ 19: 1000 Hz (50 Hz steps)	2
		07	LCUT SLOP	0: 6 dB/oct 1: 18 dB/oct	1
		08	HCUT FREQ	00: OFF 01: 700 Hz ~ 67: 4000 Hz (50 Hz steps)	2
		09	HCUT SLOPE	0: 6 dB/oct 1: 18 dB/oct	1
		10	DATA OUT SELECT	0: MAIN 1: SUB	1
		11	RTTY OUT LEVEL	0 ~ 100 (P4 = 000 ~ 100)	3
		12	SHIFT PORT	0: SHIFT 1: DTR 2: RTS	1
		13	MARK FREQUENCY	1: 1275 Hz 2: 2125 Hz	1
		14	SHIFT FREQUENCY	1: 170 Hz 1: 200 Hz 2: 425 Hz 3: 850 Hz	1
06 (ENC/DEC PSK)		01	PSK MODE	0: BPSK 1: QPSK	1
		02	DECODE AFC RANGE	0: 8 1: 1.5 2: 30 Hz	1
		03	QPSK POLARITY RX	0: NOR 1: REV	1
		04	QPSK POLARITY TX	0: NOR 1: REV	1
		05	PSK TX LEVEL	0 ~ 100 (P4 = 000 ~ 100)	3

# CAT (Computer Aided Transceiver) Operation

Table 2 (MENU Chart)							
P1	P2	P3	Function	P4	Digits		
01 (RADIO SETTING)	07 (ENC/DEC RTTY)	01	RX USOS	0: DISABLE 1: ENABLE	1		
		02	TX USOS	0: DISABLE 1: ENABLE	1		
		03	RX NEW LINE CODE	0: CR or LF or CR+LF 1: CR,LF,CR+LF	1		
		04	TX AUTO CR+LF	0: DISABLE 1: ENABLE	1		
		05	TX DIDDLE	0: OFF 1: BLANK 2: LTRS	1		
		06	BAUDOT CODE	0: CCIT 1: US	1		
02 (CW SETTING)	01 (MODE CW)	01	AGC FAST DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4		
		02	AGC MID DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4		
		03	AGC SLOW DELAY	20 ~ 4000 msec (P4= 0020 ~ 4000, 20 msec/step)	4		
		04	LCUT FREQ	00: OFF 01: 100 Hz ~ 19: 1000 Hz (50 Hz steps)	2		
		05	LCUT SLOP	0: 6 dB/oct 1: 18 dB/oct	1		
		06	HCUT FREQ	00: OFF 01: 700 Hz ~ 67: 4000 Hz (50 Hz steps)	2		
		07	HCUT SLOPE	0: 6 dB/oct 1: 18 dB/oct	1		
		08	CW OUT SELECT	0: MAIN 1: SUB	1		
		09	CW OUT LEVEL	0 ~ 100 (P4 = 000 ~ 100)	3		
		10	CW AUTO MODE	0: OFF 1: 50 MHz 2: ON	1		
		11	CW BK-IN TYPE	0: SEMI 1: FULL	1		
		12	CW BK-IN DELAY	00:30 01:50 02:100 03:150 04:200 05:250 06:300 07:400 05:250 .... 31:2800 32:2900 33:3000msec	2		
		13	CW WAVE SHAPE	0: 1 msec 1: 2 msec 2: 4 msec 3: 6 msec	1		
		14	CW FREQ DISPLAY	0: DIRECT FREQ 1: PITCH OFFSET	1		
		15	PC KEYING	0: OFF 1: DAKY 2: RTS 3: DTR	1		
		16	QSK DELAY TIME	0: 15 msec 1: 20 msec 2: 25 msec 3: 30 msec	1		
		17	CW INDICATOR	0: OFF 1: ON	1		
	02 (KEYER)	01	F KEYER TYPE	0: OFF 1: BUG 2: ELEKEY-A 3: ELEKEY-B 4: ELEKEY-Y 5: ACS	1		
		02	F KEYER DOT/DASH	0: NOR 1: REV	1		
		03	R KEYER TYPE	0: OFF 1: BUG 2: ELEKEY-A 3: ELEKEY-B 4: ELEKEY-Y 5: ACS	1		
		04	R KEYER DOT/DASH	0: NOR 1: REV	1		
		05	CW WEIGHT	2.5 ~ 4.5 (P4 = 25 ~ 45)	2		
		06	NUMBER STYLE	0: 1290 1: AUNO 2: AUNT 3: A2NO 4: A2NT 5: 12NO 6: 12NT	1		
		07	CONTEST NUMBER	0001 ~ 9999	4		
		08	CW MEMORY 1	0: TEXT 1: MESSAGE	1		
		09	CW MEMORY 2	0: TEXT 1: MESSAGE	1		
		10	CW MEMORY 3	0: TEXT 1: MESSAGE	1		
		11	CW MEMORY 4	0: TEXT 1: MESSAGE	1		
		12	CW MEMORY 5	0: TEXT 1: MESSAGE	1		
		13	REPEAT INTERVAL	1 ~ 60 sec (P4 = 01 ~ 60)	2		
		03 (DECODE CW)	01	CW DECODE BW	0: 25 1: 50 2: 100 3: 250 (Hz)	1	
			01	DECODE RX SELECT	0: MAIN 1: SUB	1	
		03 (OPERATION SETTING)	01 (GENERAL)	02	HEADPHONE MIX	0: SEPARATE 1: COMBINE-1 2: COMBINE-2	1
				03	ANT3 SELECT	0: TRX 1: RX ANT	1
04	NB WIDTH			0: 1 ms 1: 3 ms 2: 10 ms	1		
05	NB REJECTION			0: 10 dB 1: 30 dB 2: 50 dB	1		
06	BEEP LEVEL			0 ~ 100 (P4 = 000 ~ 100)	3		
07	RF/SQL VR			0: RF 1: SQL	1		
08	TUNER/232C SELECT			0: TUNER 1: RS232C	1		
09	232C RATE			0: 4800 bps 1: 9600 bps 2: 19200 bps 3: 38400 bps	1		
10	232C TIME OUT TIMER			0: 10 msec 1: 100 msec 2: 1000 msec 3: 3000 msec	1		
11	CAT RATE			0: 4800 bps 1: 9600 bps 2: 19200 bps 3: 38400 bps	1		
12	CAT TIME OUT TIMER			0: 10 msec 1: 100 msec 2: 1000 msec 3: 3000 msec	1		
13	CAT RTS			0: DISABLE 1: ENABLE	1		
14	QMB CH			0: 5ch 1: 10ch	1		
15	MEM GROUP			0: DISABLE 1: ENABLE	1		
16	QUICK SPLIT INPUT			0: DISABLE 1: ENABLE	1		
17	QUICK SPLIT FREQ			-20 kHz ~ +00 (or -00) ~ +20 kHz (P4= -20 ~ +00 or -00 ~ +20)	3		
18	TX TIME OUT TIMER			0 (OFF) ~ 30 min (P4= 00 ~ 30)	2		
19	MIC SCAN			0: DISABLE 1: ENABLE	1		
20	MIC SCAN RESUME			0: PAUSE 1: TIME	1		
21	REF FREQ ADJ			-25 ~ +00 (or -00) ~ +25 (P4= -25 ~ +00 or -00 ~ +25)	3		
02 (RX-DSP)	22			CS DIAL	00: RF POWER 01: MONI LEVEL 02: DNR LEVEL 03: NB LEVEL 04: VOX GAIN 05: VOX DELAY 06: ANTI VOX 07: STEP DIAL 08: MEM CH 09: GROUP 10: R.FIL 11: LEVEL	2	
	23		KEYBOARD LANGUAGE	00: JAPANESE 01: ENGLISH(US) 02: ENGLISH(UK) 03: FRENCH 04: FRENCH(CA) 05: GERMAN 06: PORTUGUESE 07: PORTUGUESE(BR) 08: SPANISH 09: SPANISH(LATAM) 10: ITALIAN 11: LEVEL	2		
02 (RX-DSP)	01		APF WIDTH	0: NARROW 1: MEDIUM 2: WIDE	1		
	02		CONTOUR LEVEL	-40 ~ 0 ~ +20 (P4 = -40 ~ -00 or +00 ~ +20)	3		
	03		CONTOUR WIDTH	01 ~ 11	2		
	04		DNR LEVEL	01 ~ 15	2		
05	IF NOTCH WIDTH		0: NARROW 1: WIDE	1			

# CAT (Computer Aided Transceiver) Operation

Table 2 (MENU Chart)						
P1	P2	P3	Function	P4	Digits	
03 (OPERATION SETTING)	03 (TX AUDIO)	01	PROC TYPE	0: COMP 1: AMC	1	
		02	AMC RELEASE TIME	0: FAST 1: MID 2: SLOW	1	
		03	PRMTRC EQ1 FREQ	00: OFF 01: 100 02: 200 03: 300 04: 400 05: 500 06: 600 07: 700 Hz	2	
		04	PRMTRC EQ1 LEVEL	-10 ~ 0 ~ +10 (P4 = -10 ~ -00 or +00 ~ +10)	3	
		05	PRMTRC EQ1 BWTH	01 ~ 10	2	
		06	PRMTRC EQ2 FREQ	00: OFF 01: 700 02: 800 03: 900 04: 1000 05: 1100 06: 1200 07: 1300 08: 1400 09: 1500 Hz	2	
		07	PRMTRC EQ2 LEVEL	-10 ~ 0 ~ +10 (P4 = -10 ~ -00 or +00 ~ +10)	3	
		08	PRMTRC EQ2 BWTH	01 ~ 10	2	
		09	PRMTRC EQ3 FREQ	00: OFF 01: 1500 02: 1600 03: 1700 04: 1800 05: 1900 06: 2000 ~ 18: 3200 Hz	2	
		10	PRMTRC EQ3 LEVEL	-10 ~ 0 ~ +10 (P4 = -10 ~ -00 or +00 ~ +10)	3	
		11	PRMTRC EQ3 BWTH	01 ~ 10	2	
		12	P PRMTRC EQ1 FREQ	00: OFF 01: 100 02: 200 03: 300 04: 400 05: 500 06: 600 07: 700 Hz	2	
		13	P PRMTRC EQ1 LEVEL	-10 ~ 0 ~ +10 (P4 = -10 ~ -00 or +00 ~ +10)	3	
		14	P PRMTRC EQ1 BWTH	01 ~ 10	2	
		15	P PRMTRC EQ2 FREQ	00: OFF 01: 700 02: 800 03: 900 04: 1000 05: 1100 06: 1200 07: 1300 08: 1400 09: 1500 Hz	2	
		16	P PRMTRC EQ2 LEVEL	-10 ~ 0 ~ +10 (P4 = -10 ~ -00 or +00 ~ +10)	3	
		17	P PRMTRC EQ2 BWTH	01 ~ 10	2	
		18	P PRMTRC EQ3 FREQ	00: OFF 01: 1500 02: 1600 03: 1700 04: 1800 05: 1900 06: 2000 ~ 18: 3200 Hz	2	
		19	P PRMTRC EQ3 LEVEL	-10 ~ 0 ~ +10 (P4 = -10 ~ -00 or +00 ~ +10)	3	
		20	P PRMTRC EQ3 BWTH	01 ~ 10	2	
04 (TX GNRL)	04 (TX GNRL)	01	HF MAX POWER	5 ~ 100 (P4 = 005 ~ 100) FTDX101D / 5 ~ 200 (P4 = 005 ~ 200) FTDX101MP	3	
		02	50M MAX POWER	5 ~ 100 (P4 = 005 ~ 100) FTDX101D / 5 ~ 200 (P4 = 005 ~ 200) FTDX101MP	3	
		03	70M MAX POWER	5 ~ 50 (P4 = 005 ~ 050)	3	
		04	AM MAX POWER	5 ~ 25 (P4 = 005 ~ 025) FTDX101D / 5 ~ 500 (P4 = 005 ~ 050) FTDX101MP	3	
		05	VOX SELECT	0: MIC 1: DATA	1	
		06	DATA VOX GAIN	0 ~ 100 (P4 = 000 ~ 100)	3	
		07	EMERGENCY FREQ TX	0: DISABLE 1: ENABLE	1	
05 (TUNING)	05 (TUNING)	01	SSB/CW DIAL STEP	0: 5 1: 10 (Hz)	1	
		02	RTTY/PSK DIAL STEP	0: 5 1: 10 (Hz)	1	
		03	CH STEP	0: 1 1: 2.5 2: 5 (kHz)	1	
		04	AM CH STEP	0: 2.5 1: 5 2: 9 3: 10 4: 12.5 5: 25 (kHz)	1	
		05	FM CH STEP	0: 5 1: 6.25 2: 10 3: 12.5 4: 20 5: 25 (kHz)	1	
		06	MAIN STEPS PER REV.	0: 250 1: 500 2: 1000	1	
		07	MPVD STEPS PER REV.	0: 250 1: 500	1	
04 (DISPLAY SETTING)	01 (DISPLAY)	01	MY CALL.	Up to 12 characters	12	
		02	MY CALL TIME	0: OFF 1: 0.5 2: 1 3: 2 4: 3 5: 5 (sec)	1	
		03	SCREEN SAVER	0: OFF 1: 15 2: 30 3: 60 (min)	1	
		04	TFT CONTRAST	00 ~ 20	2	
		05	DIMMER TFT	00 ~ 20	2	
		06	DIMMER LED	00 ~ 20	2	
		07	MOUSE POINTER SPEED	00 ~ 20	2	
		08	FREQ STYLE	0: LIGHT 1: BOLD	1	
	02 (SCOPE)	02 (SCOPE)	01	RBW	0: HIGH 1: MID 2: LOW	1
			02	SCOPE CTR	0: FILTER 1: CAR POINT	1
			03	2D DISP SENSITIVITY	0: NORMAL 1: HI	1
			04	3DSS DISP SENSITIVITY	0: NORMAL 1: HI	1
03 (EXT-MONITOR)	03 (EXT-MONITOR)	01	EXT DISPLAY	0: DISABLE 1: ENABLE	1	
		02	PIXEL	0: 800x480 1: 800x600	1	
05 (EXTENSION SETTING)	01 (DATE&TIME)	01	DAY	-	-	
		02	MONTH	-	-	
		03	YEAR	-	-	
		04	HOUR	-	-	
		05	MINUTE	-	-	
	02 (SD CARD)	02 (SD CARD)	01	MEM LIST LOAD	-	-
			02	MEM LIST SAVE	-	-
			03	MENU LOAD	-	-
			04	MENU SAVE	-	-
			05	INFORMATION	-	-
			06	FIRMWARE UPDATE	-	-
			07	FORMAT	-	-
	03 (SOFT VERSION)	01	-	-	-	
	04 (CALIBRATION)	04 (CALIBRATION)	01	-	-	-
			01	MEMORY CLEAR	-	-
05 (RESET)	05 (RESET)	02	MENU CLEAR	-	-	
		03	ALL RESET	-	-	

# CAT (Computer Aided Transceiver) Operation

<b>FA</b>		<b>FREQUENCY MAIN BAND</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 000030000 - 075000000 (Hz)
	<b>F</b>	<b>A</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
	P1	;									
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>A</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>A</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
	P1	;									

<b>FB</b>		<b>FREQUENCY SUB BAND</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 000030000 - 075000000 (Hz)
	<b>F</b>	<b>B</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
	P1	;									
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>B</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>B</b>	P1	P1	P1	P1	P1	P1	P1	P1	
	11	12	13	14	15	16	17	18	19	20	
	P1	;									

<b>FN</b>		<b>FINE TUNING</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Fine Tuning "OFF" 1: Fine Tuning "ON"
	<b>F</b>	<b>N</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>N</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>N</b>	P1	;							

<b>FR</b>		<b>FUNCTION RX</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band Receiver: RX 1: MAIN Band Receiver: Mute P2 0: SUB Band Receiver: RX 1: SUB Band Receiver: Mute
	<b>F</b>	<b>R</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>R</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>R</b>	P1	P2	;						

<b>FS</b>		<b>FAST STEP</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band FAST Key "OFF" 1: MAIN Band FAST Key "ON" 2: SUB Band FAST Key "OFF" 3: SUB Band FAST Key "ON" 4: MAIN Band FAST Key "OFF" / SUB Band FAST Key "OFF" 5: MAIN Band FAST Key "ON" / SUB Band FAST Key "OFF" 6: MAIN Band FAST Key "OFF" / SUB Band FAST Key "ON" 7: MAIN Band FAST Key "ON" / SUB Band FAST Key "ON"
	<b>F</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>S</b>	P1	;							

<b>FT</b>		<b>FUNCTION TX</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band: Transmitter: "ON" ↔ "OFF" (Toggle) 1: SUB Band: Transmitter: "ON" ↔ "OFF" (Toggle) 2: MAIN Band Transmitter: TX 3: SUB Band Transmitter: TX P2 0: MAIN Band Transmitter: TX 1: SUB Band Transmitter: TX
	<b>F</b>	<b>T</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>T</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>F</b>	<b>T</b>	P2	;							

<b>GT</b>		<b>AGC FUNCTION</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 0: AGC "OFF" 1: AGC "FAST" 2: AGC "MID" 3: AGC "SLOW" 4: AGC "AUTO-FAST" 5: AGC "AUTO-MID" 6: AGC "AUTO-SLOW" P3 0: AGC "OFF" 1: AGC "FAST" 2: AGC "MID" 3: AGC "SLOW" 4: AGC "AUTO"
	<b>G</b>	<b>T</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>G</b>	<b>T</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>G</b>	<b>T</b>	P1	P3	;						

# CAT (Computer Aided Transceiver) Operation

ID	IDENTIFICATION										
Set	1	2	3	4	5	6	7	8	9	10	P1 0681: FTDX101D 0682: FTDX101MP
Read	1	2	3	4	5	6	7	8	9	10	
	I	D	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	I	D	P1	P1	P1	P1	;				

IF	INFORMATION										
Set	1	2	3	4	5	6	7	8	9	10	P0 001-099 (Memory Channel), P1L -P9U (PMS), 5xx (5MHz BAND), EMG (EMERGENCY CH) P2 VFO-A Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9990 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW-U 4: FM 5: AM 6: RTTY-L 7: CW-L 8: DATA-L 9: RTTY-U A: DATA-FM B: FM-N C: DATA-U D: AM-N E: PKT F: DATA-FM-N P7 0: VFO 1: Memory 2: Memory Tune 3: Quick Memory Bank (QMB) 4: - 5: PMS P8 0: OFF 1: CTCSS ENC/DEC 2: CTCSS ENC P9 00: (Fixed) P10 0: Simplex 1: Plus Shift 2: Minus Shift
Read	1	2	3	4	5	6	7	8	9	10	
	I	F	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	I	F	P1	P1	P1	P2	P2	P2	P2	P2	
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P2	P3	P3	P3	P3	P3	P4	
	21	22	23	24	25	26	27	28	29	30	

IS	IF-SHIFT										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band RX 1: SUB Band RX P2 0: (Fixed) P3 +/- P4 0 ~ 1200 Hz (20 Hz steps)
		I	S	P1	P2	P3	P4	P4	P4	P4	
Read	1	2	3	4	5	6	7	8	9	10	
	I	S	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	I	S	P1	P2	P3	P4	P4	P4	P4	;	

KM	KEYER MEMORY										
Set	1	2	3	4	5	6	7	~	n-1	n	P1 1 - 5 : Keyer Memory Channel Number P2 Message Characters (up to 50 characters)
		K	M	P1	P2	P2	P2	P2	~	P2	
Read	1	2	3	4	5	6	7	8	9	10	
	K	M	P1	;							
Answer	1	2	3	4	5	6	7	~	n-1	n	
	K	M	P1	P2	P2	P2	P2	~	P2	;	

KP	KEY PITCH										
Set	1	2	3	4	5	6	7	8	9	10	P1 00: 300 Hz - 75: 1050 Hz (10Hz steps)
		K	P	P1	P1	;					
Read	1	2	3	4	5	6	7	8	9	10	
	K	P	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	K	P	P1	P1	;						

KR	KEYER										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: KEYER "OFF" 1: KEYER "ON"
		K	R	P1	;						
Read	1	2	3	4	5	6	7	8	9	10	
	K	R	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	K	R	P1	;							

KS	KEY SPEED										
Set	1	2	3	4	5	6	7	8	9	10	P1 004 - 060 (WPM)
		K	S	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
	K	S	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	K	S	P1	P1	P1	;					

# CAT (Computer Aided Transceiver) Operation

<b>KY</b>	<b>CW KEYING</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 1: Keyer Memory "1" Playback 2: Keyer Memory "2" Playback 3: Keyer Memory "3" Playback 4: Keyer Memory "4" Playback 5: Keyer Memory "5" Playback 6: Message Keyer "1" Playback 7: Message Keyer "2" Playback 8: Message Keyer "3" Playback 9: Message Keyer "4" Playback A: Message Keyer "5" Playback
	<b>K</b>	<b>Y</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>LK</b>	<b>LOCK</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band DIAL Lock "OFF" 1: MAIN Band DIAL Lock "ON" 2: SUB Band DIAL Lock "OFF" 3: SUB Band DIAL Lock "ON" 4: MAIN Band DIAL Lock "OFF" / SUB Band DIAL Lock "OFF" 5: MAIN Band DIAL Lock "ON" / SUB Band DIAL Lock "OFF" 6: MAIN Band DIAL Lock "OFF" / SUB Band DIAL Lock "ON" 7: MAIN Band DIAL Lock "ON" / SUB Band DIAL Lock "ON"
	<b>L</b>	<b>K</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>L</b>	<b>K</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>L</b>	<b>K</b>	<b>P1</b>	;							

<b>LM</b>	<b>LOAD MESSAGE</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: DVS      P2 0: DVS (Recording Stop) 1: DVS (CH "1" Recording Start/Stop) 2: DVS (CH "2" Recording Start/Stop) 3: DVS (CH "3" Recording Start/Stop) 4: DVS (CH "4" Recording Start/Stop) 5: DVS (CH "5" Recording Start/Stop)
	<b>L</b>	<b>M</b>	<b>P1</b>	<b>P2</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>L</b>	<b>M</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>L</b>	<b>M</b>	<b>P1</b>	<b>P2</b>	;						

<b>MA</b>	<b>MEMORY CHANNEL TO MAIN BAND</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>A</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>MB</b>	<b>MEMORY CHANNEL TO SUB BAND</b>										
Set	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>B</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>MC</b>	<b>MEMORY CHANNEL</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 001-099 (Memory Channel), P1L -P9U (PMS), 5xx (5MHz BAND), EMG (EMERGENCY CH)
	<b>M</b>	<b>C</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>C</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>C</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					

<b>MD</b>	<b>OPERATING MODE</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band RX 1: SUB Band RX P2 MODE    1: LSB   2: USB   3: CW-U   4: FM   5: AM   6: RTTY-L 7: CW-L   8: DATA-L   9: RTTY-U   A: DATA-FM B: FM-N   C: DATA-U   D: AM-N   E: PKT   F: DATA-FM-N
	<b>M</b>	<b>D</b>	<b>P1</b>	<b>P2</b>	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>D</b>	<b>P1</b>	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>D</b>	<b>P1</b>	<b>P2</b>	;						

<b>MG</b>	<b>MIC GAIN</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 000 - 100
	<b>M</b>	<b>G</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>G</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>G</b>	<b>P1</b>	<b>P1</b>	<b>P1</b>	;					

# CAT (Computer Aided Transceiver) Operation

<b>ML</b>		<b>MONITOR LEVEL</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MONI "ON/OFF" 1: MONI Level P2 P1=0 000: MONI "OFF" 001: MONI "ON" P1=1 000 - 100
	<b>M</b>	<b>L</b>	P1	P2	P2	P2	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>L</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>L</b>	P1	P2	P2	P2	;				

<b>MR</b>		<b>MEMORY CHANNEL READ</b>									
Set	1	2	3	4	5	6	7	8	9	10	P0 001-099 (Memory Channel), P1L -P9U (PMS), 5xx (5MHz BAND), EMG (EMERGENCY CH) P2 VFO-A Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9990 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW-U 4: FM 5: AM 6: RTTY-L 7: CW-L 8: DATA-L 9: RTTY-U A: DATA-FM B: FM-N C: DATA-U D: AM-N E: PKT F: DATA-FM-N P7 0: VFO 1: Memory P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9 00: (Fixed) P10 0: Simplex 1: Plus Shift 2: Minus Shift
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>R</b>	P0	P0	P0	;					
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>R</b>	P1	P1	P1	P2	P2	P2	P2	P2	
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P2	P3	P3	P3	P3	P3	P4	
	21	22	23	24	25	26	27	28	29	30	
	P5	P6	P7	P8	P9	P9	P10	;			

<b>MS</b>		<b>METER SW</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 MAIN P2 SUB 0: POW 0: ALC 1: COMP 1: VDD 2: TEMP 2: ID 3: SWR
	<b>M</b>	<b>S</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>S</b>	P1	P2	;						

<b>MT</b>		<b>MEMORY CHANNEL WRITE/TAG</b>									
Set	1	2	3	4	5	6	7	8	9	10	P0/1 001-099 (Memory Channel), P1L -P9U (PMS), 5xx (5MHz BAND), EMG (EMERGENCY CH) P2 VFO-A Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9990 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW-U 4: FM 5: AM 6: RTTY-L 7: CW-L 8: DATA-L 9: RTTY-U A: DATA-FM B: FM-N C: DATA-U D: AM-N E: PKT F: DATA-FM-N P7 Set: 0: (Fixed) / Read: 0: VFO 1: Memory P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9 00: (Fixed) P10 0: Simplex 1: Plus Shift 2: Minus Shift P11 0: (Fixed) P12 TAG Characters (up to 12 characters) (ASCII)
	<b>M</b>	<b>T</b>	P1	P1	P1	P2	P2	P2	P2	P2	
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P2	P3	P3	P3	P3	P3	P4	
	21	22	23	24	25	26	27	28	29	30	
	P5	P6	P7	P8	P9	P9	P10	P11	P12	P12	
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>T</b>	P0	P0	P0	;					
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P2	P3	P3	P3	P3	P3	P4	
	21	22	23	24	25	26	27	28	29	30	
	P5	P6	P7	P8	P9	P9	P10	P11	P12	P12	
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>T</b>	P1	P1	P1	P2	P2	P2	P2	P2	
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P2	P3	P3	P3	P3	P3	P4	
	21	22	23	24	25	26	27	28	29	30	
	P5	P6	P7	P8	P9	P9	P10	P11	P12	P12	
31	32	33	34	35	36	37	38	39	40		
P12	P12	P12	P12	P12	P12	P12	P12	P12	P12		
41	42	43	44	45	46	47	48	49	50		
;											



# CAT (Computer Aided Transceiver) Operation

<b>MW</b>		<b>MEMORY CHANNEL WRITE</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 001-099 (Memory Channel), P1L -P9U (PMS) P2 Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9990 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW-U 4: FM 5: AM 6: RTTY-L 7: CW-L 8: DATA-L 9: RTTY-U A: DATA-FM B: FM-N C: DATA-U D: AM-N E: PKT F: DATA-FM-N P7 0: (Fixed) P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9 00: (Fixed) P10 0: Simplex 1: Plus Shift 2: Minus Shift	
	<b>M</b>	<b>W</b>	P1	P1	P1	P2	P2	P2	P2	P2		P2
	11	12	13	14	15	16	17	18	19	20		
	P2	P2	P2	P2	P3	P3	P3	P3	P3	P4		
	21	22	23	24	25	26	27	28	29	30		
Read	P5	P6	P7	P8	P9	P9	P10	;				
	1	2	3	4	5	6	7	8	9	10		
Answer	1	2	3	4	5	6	7	8	9	10		

<b>MX</b>		<b>MOX SET</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MOX "OFF" 1: MOX "ON"
	<b>M</b>	<b>X</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>X</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>X</b>	P1	;							

<b>NA</b>		<b>NARROW</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 0: OFF 1: ON
	<b>M</b>	<b>A</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>A</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>M</b>	<b>A</b>	P1	P2	;						

<b>NB</b>		<b>NOISE BLANKER STATUS</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 0: Noise Blanker "OFF" 1: Noise Blanker "ON"
	<b>N</b>	<b>B</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>B</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>B</b>	P1	P2	;						

<b>NL</b>		<b>NOISE BLANKER LEVEL</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Fixed P2 000 - 010
	<b>N</b>	<b>L</b>	P1	P2	P2	P2	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>L</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>L</b>	P1	P2	P2	P2	;				

<b>NR</b>		<b>NOISE REDUCTION</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 0: Noise Reduction "OFF" 1: Noise Reduction "ON"
	<b>N</b>	<b>R</b>	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>R</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>N</b>	<b>R</b>	P1	P2	;						

# CAT (Computer Aided Transceiver) Operation

OI	OPPOSITE BAND INFORMATION										
Set	1	2	3	4	5	6	7	8	9	10	P1 001-099 (Memory Channel), P1L -P9U (PMS), 5xx (5MHz BAND), EMG (EMERGENCY CH) P2 VFO-B Frequency (Hz) P3 Clarifier Direction +: Plus Shift, -: Minus Shift Clarifier Offset: 0000 - 9990 (Hz) P4 0: RX CLAR "OFF" 1: RX CLAR "ON" P5 0: TX CLAR "OFF" 1: TX CLAR "ON" P6 MODE 1: LSB 2: USB 3: CW-U 4: FM 5: AM 6: RTTY-L 7: CW-L 8: DATA-L 9: RTTY-U A: DATA-FM B: FM-N C: DATA-U D: AM-N E: PKT E: DATA-FM-N P7 0: VFO 1: Memory 2: Memory Tune 3: Quick Memory Bank (QMB) 4: - 5: PMS P8 0: CTCSS "OFF" 1: CTCSS ENC/DEC 2: CTCSS ENC P9 00: (Fixed) P10 0: Simplex 1: Plus Shift 2: Minus Shift
Read	1	2	3	4	5	6	7	8	9	10	
Answer	O	I	;								
	1	2	3	4	5	6	7	8	9	10	
	O	I	P1	P1	P1	P2	P2	P2	P2	P2	
	11	12	13	14	15	16	17	18	19	20	
	P2	P2	P2	P2	P3	P3	P3	P3	P4		
	21	22	23	24	25	26	27	28	29	30	
	P5	P6	P7	P8	P9	P10	;				

OS	OFFSET (REPEATER SHIFT)										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 0: Simplex 1: Plus Shift 2: Minus Shift *: This command can be activated only with an FM mode.
Read	1	2	3	4	5	6	7	8	9	10	
Answer	O	S	P1	P2	;						
	1	2	3	4	5	6	7	8	9	10	
	O	S	P1	P2	;						
	O	S	P1	P2	;						

PA	PRE-AMP (IPO)										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 0: IPO 1: AMP 1 2: AMP 2
Read	1	2	3	4	5	6	7	8	9	10	
Answer	P	A	P1	P2	;						
	1	2	3	4	5	6	7	8	9	10	
	P	A	P1	P2	;						
	P	A	P1	P2	;						


PB	PLAY BACK										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: DVS P2 0: DVS (Playback Stop) 1: DVS (CH "1" Playback Start) 2: DVS (CH "2" Playback Start) 3: DVS (CH "3" Playback Start) 4: DVS (CH "4" Playback Start) 5: DVS (CH "5" Playback Start)
Read	1	2	3	4	5	6	7	8	9	10	
Answer	P	B	P1	P2	;						
	1	2	3	4	5	6	7	8	9	10	
	P	B	P1	P2	;						
	P	B	P1	P2	;						

PC	POWER CONTROL										
Set	1	2	3	4	5	6	7	8	9	10	P1 005 - 100 (FTDX101D) 005 - 200 (FTDX101MP)
Read	1	2	3	4	5	6	7	8	9	10	
Answer	P	C	P1	P1	P1	;					
	1	2	3	4	5	6	7	8	9	10	
	P	C	P1	P1	P1	;					
	P	C	P1	P1	P1	;					

PL	SPEECH PROCESSOR LEVEL										
Set	1	2	3	4	5	6	7	8	9	10	P1 000 -100
Read	1	2	3	4	5	6	7	8	9	10	
Answer	P	L	P1	P1	P1	;					
	1	2	3	4	5	6	7	8	9	10	
	P	L	P1	P1	P1	;					
	P	L	P1	P1	P1	;					

PR	SPEECH PROCESSOR										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Speech Processor 1: Parametric Microphone Equalizer P2 1: "OFF" 2: "ON"
Read	1	2	3	4	5	6	7	8	9	10	
Answer	P	R	P1	P2	;						
	1	2	3	4	5	6	7	8	9	10	
	P	R	P1	P2	;						
	P	R	P1	P2	;						

# CAT (Computer Aided Transceiver) Operation

PS		POWER SWITCH										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: POWER "OFF" 1: POWER "ON"  This command requires dummy data be initially sent. Then after one second and before two seconds the command is sent. (For example, Send "PS1;" command, wait 1 second, and then Send "PS1;" command again within 2 seconds.)	
	P	S	P1	;								
Read	1	2	3	4	5	6	7	8	9	10		
	P	S	;									
Answer	1	2	3	4	5	6	7	8	9	10		 When using an RS-232C cable, the PS command (POWER SWITCH) is not available, so the transceiver cannot be turned ON with the CAT command.
	P	S	P1	;								

QI		QMB STORE									
Set	1	2	3	4	5	6	7	8	9	10	
	Q	I	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

QR		QMB RECALL									
Set	1	2	3	4	5	6	7	8	9	10	
	Q	R	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

QS		QUICK SPLIT									
Set	1	2	3	4	5	6	7	8	9	10	
	Q	S	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

RA		RF ATTENUATOR									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band  P2 0: OFF 1: 6dB 2: 12dB 3: 18dB
	R	A	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	R	A	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	R	A	P1	P2	;						

RC		CLAR CLEAR									
Set	1	2	3	4	5	6	7	8	9	10	
	R	C	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

RD		CLAR DOWN									
Set	1	2	3	4	5	6	7	8	9	10	P1 0000 - 9990 (Hz)
	R	D	P1	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

RF		ROOFING FILTER									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band  P2 1: 12 kHz 2: 3 kHz 3: 1.2 kHz (option) 4: 600 Hz 5: 300 Hz (option)  P3: 6: 12 kHz 7: 3 kHz 8: 1.2 kHz 9: 600 Hz A: 300 Hz
	R	F	P1	P2	;						
Read	1	2	3	4	5	6	7	8	9	10	
	R	F	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	R	F	P1	P3	;						

# CAT (Computer Aided Transceiver) Operation

<b>RG</b>		<b>RF GAIN</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 000 - 255
	<b>R</b>	<b>G</b>	P1	P2	P2	P2	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>G</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>G</b>	P1	P2	P2	P2	;				

<b>RI</b>		<b>RADIO INFORMATION</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Hi-SWR 3: REC 4: PLAY P2 0: OFF 1: ON
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>I</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>I</b>	P1	P2	;						

<b>RL</b>		<b>NOISE REDUCTION LEVEL</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 01 - 15
	<b>R</b>	<b>L</b>	P1	P2	P2	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>L</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>L</b>	P1	P2	P2	;					

<b>RM</b>		<b>READ METER</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1=0 P2: Left side Meter 0 - 255 P3: Right side Meter 0 - 255 P1= 1: S (MAIN Band) 2: S (SUB Band) 3: COMP 4: ALC 5: PO 6: SWR 7: IDD 8: VDD 9: TEMP P2: 0 - 255 P3: 0
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>M</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>M</b>	P1	P2	P2	P2	P3	P3	P3	;	

<b>RS</b>		<b>RADIO STATUS</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: NORMAL MODE 1: MENU MODE
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>S</b>	P1	;							

<b>RT</b>		<b>CLAR</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: RX Clarifier "OFF" 1: RX Clarifier "ON"
	<b>R</b>	<b>T</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>T</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>R</b>	<b>T</b>	P1	;							

<b>RU</b>		<b>RX CLARIFIER PLUS OFFSET</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0000 - 9990 (Hz)
	<b>R</b>	<b>U</b>	P1	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>SC</b>		<b>SCAN</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: Scan "OFF" 1: Scan "ON" (UP ward) 2: Scan "ON" (DOWN ward)
	<b>S</b>	<b>C</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>C</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>C</b>	P1	;							

# CAT (Computer Aided Transceiver) Operation

SD	CW BREAK-IN DELAY TIME															
Set	1	2	3	4	5	6	7	8	9	10	00: 30	01: 50	02: 100	03: 150	04: 200	05: 250
	<b>S</b>	<b>D</b>	P1	P1	;						06: 300	07: 400	- 32: 2900	33: 3000 (msec)	(06 to 33: 100 msec steps)	
Read	1	2	3	4	5	6	7	8	9	10						
	<b>S</b>	<b>D</b>	;													
Answer	1	2	3	4	5	6	7	8	9	10						
	<b>S</b>	<b>D</b>	P1	P1	;											

SF	SUB DIAL										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MPVD
	<b>S</b>	<b>F</b>	P1	P2	;						1: MULTI knob
Read	1	2	3	4	5	6	7	8	9	10	P2 P1=0
	<b>S</b>	<b>F</b>	P1	;							1: CLAR 2: VCT 3: SUB 4: CS
Answer	1	2	3	4	5	6	7	8	9	10	P1=1
	<b>S</b>	<b>F</b>	P1	P2	;						0: RF POWER 1: MONI LEVEL 2: DNR LEVEL 3: NB LEVEL 4: VOX GAIN
											5: VOX DELAY 6: ANTI VOX 7: STEP DIAL 8: MEM CH 9: GROUP
											A: R.FIL B: SPEED C: PEAK D: COLOR E: LEVEL

SH	WIDTH										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band
	<b>S</b>	<b>H</b>	P1	P2	P3	P3	;				1: SUB Band
Read	1	2	3	4	5	6	7	8	9	10	P2 0 (Fixed)
	<b>S</b>	<b>H</b>	P1	;							P3 00 -21 (See Table 3)
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>H</b>	P1	P2	P3	P3	;				

Command	Bandwidth				
	P3	SSB	CW	RTTY	PSK
00 (Default)	(Default)*	(Default)*	(Default)*	(Default)*	(Default)*
01	300 Hz	50 Hz	50 Hz	50 Hz	50 Hz
02	400 Hz	100 Hz	100 Hz	100 Hz	100 Hz
03	600 Hz	150 Hz	150 Hz	150 Hz	150 Hz
04	850 Hz	200 Hz	200 Hz	200 Hz	200 Hz
05	1100 Hz	250 Hz	250 Hz	250 Hz	250 Hz
06	1200 Hz	300 Hz	300 Hz	300 Hz	300 Hz
07	1500 Hz	350 Hz	350 Hz	350 Hz	350 Hz
08	1650 Hz	400 Hz	400 Hz	400 Hz	400 Hz
09	1800 Hz	450 Hz	450 Hz	450 Hz	450 Hz
10	1950 Hz	500 Hz	500 Hz	500 Hz	500 Hz
11	2100 Hz	600 Hz	600 Hz	600 Hz	600 Hz
12	2200 Hz	800 Hz	800 Hz	800 Hz	800 Hz
13	2300 Hz	1200 Hz	1200 Hz	1200 Hz	1200 Hz
14	2400 Hz	1400 Hz	1400 Hz	1400 Hz	1400 Hz
15	2500 Hz	1700 Hz	1700 Hz	1700 Hz	1700 Hz
16	2600 Hz	2000 Hz	2000 Hz	2000 Hz	2000 Hz
17	2700 Hz	2400 Hz	2400 Hz	2400 Hz	2400 Hz
18	2800 Hz	3000 Hz	3000 Hz	3000 Hz	3000 Hz
19	2900 Hz	-	-	-	-
20	3000 Hz	-	-	-	-
21	3200 Hz	-	-	-	-

\*(The default bandwidth varies depending on the selected roofing filter.)

SM	S-METER READING										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band
											1: SUB Band
Read	1	2	3	4	5	6	7	8	9	10	P2 000 - 255
	<b>S</b>	<b>M</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>M</b>	P1	P2	P2	P2	;				

SQ	SQUELCH LEVEL										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band
	<b>S</b>	<b>Q</b>	P1	P2	P2	P2	;				1: SUB Band
Read	1	2	3	4	5	6	7	8	9	10	P2 000 - 100
	<b>S</b>	<b>Q</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>S</b>	<b>Q</b>	P1	P2	P2	P2	;				

# CAT (Computer Aided Transceiver) Operation

SS	SPECTRUM SCOPE										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band 1: SUB Band P2 0: SPEED 1: PEAK 2: MARKER 3: COLOR 4: LEVEL 5: SPAN 6: MODE 7: AF-FFT/OSCILLOSCOPE 8: HOLD P2=0 (SPEED): P3 0: SLOW1 1: SLOW2 2: FAST1 3: FAST2 4: FAST3 P4 - P7: 0: Fixed P2=1 (PEAK): P3 0: LV1 1: LV2 2: LV3 3: LV4 4: LV5 P4 - P7: 0: Fixed P2=2 (MARKER): P3 0: MARKER "OFF" 1: MARKER "ON" P4 - P7: 0: Fixed P2=3 (COLOR): P3 0: COLOR-1 - A: COLOR-11 (DIRECT SAMPLING) P4 0: COLOR-12 - 6: COLOR-18 (NARROW BAND) P5 0: NARROW BAND COLOR "OFF" 1: NARROW BAND COLOR "ON" P6 ~ P7: 0: Fixed P2=4 (LEVEL): P3 - P7: -30.0 - +30.0 (0.5 dB step) P2=5 (SPAN): P3 0: 1 kHz 1: 2 kHz 2: 5 kHz 3: 10 kHz 4: 20 kHz 5: 50 kHz 6: 100 kHz 7: 200 kHz 8: 500 kHz 9: 1 MHz P4 - P7: 0: Fixed P2=6 (MODE): P3 0: 3DSS CENTER 1: 3DSS CURSOR 2: 3DSS FIX 3: W/F CENTER (L) 4: W/F CENTER (N) 5: W/F CENTER (S) 6: W/F CURSOR (L) 7: W/F CURSOR (N) 8: W/F CURSOR (S) 9: W/F FIX (L) A: W/F FIX (N) B: W/F FIX (S) P4 - P7: 0: Fixed P2=7 (AF-FFT/OSCILLOSCOPE): P1 0: Fixed P3 0: AF-FFT (ATT=0dB) 1: AF-FFT (ATT=10dB) 2: AF-FFT (ATT=20dB) P4 0: OSC Level (ATT=0dB) 1: OSC Level (ATT=10dB) 2: OSC Level (ATT=20dB) P5 0: OSC Time (1msec) 1: OSC Time (3msec) 2: OSC Time (10msec) 3: OSC Time (30msec) 4: OSC Time (100msec) 5: OSC Time (300msec) P6 - P7: 0: Fixed P2=8 (HOLD): P1 0: Fixed P3 0: HOLD "OFF" 1: HOLD "ON" P4 - P7: 0: Fixed
Read	S	S	P1	P2	P3	P4	P5	P6	P7	;	
Answer	1	2	3	4	5	6	7	8	9	10	
	S	S	P1	P2	P3	P4	P5	P6	P7	;	

ST	SPLIT										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: SPLIT "OFF" 1: SPLIT "ON" 2: SPLIT "ON" + 5 kHz Up
Read	S	T	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	S	T	P1	;							

SV	SWAP VFO										
Set	1	2	3	4	5	6	7	8	9	10	Exchanges the MAIN band and SUB band frequency data.
Read	S	V	;								
Answer	1	2	3	4	5	6	7	8	9	10	

SY	SYNC										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: SYNC "OFF" 1: SYNC "ON" 2: SYNC "ON" + Copy (Frequency, Mode)
Read	S	Y	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	S	Y	P1	;							

TX	TX SET										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: RADIO TX "OFF" CAT TX "OFF" 1: RADIO TX "OFF" CAT TX "ON" 2: RADIO TX "ON" CAT TX "OFF" (Answer)
Read	T	X	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	T	X	P1	;							

# CAT (Computer Aided Transceiver) Operation

<b>UL</b>		<b>PLL UNLOCK STATUS</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: PLL "Lock" 1: PLL "Unlock"
	<b>U</b>	<b>L</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
	<b>U</b>	<b>L</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>U</b>	<b>L</b>	P1	;							

<b>UP</b>		<b>MIC UP</b>									
Set	1	2	3	4	5	6	7	8	9	10	
	<b>U</b>	<b>P</b>	;								
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>VD</b>		<b>VOX DELAY TIME / DATA VOX DELAY TIME</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 00: 30 msec 01: 50 msec 02: 100 msec 03: 150 msec 04: 200 msec 05: 250 msec 06: 300 msec - 33: 3000 msec (06 - 33: 10 msec multiples) VD command has different parameters to be changed according to the setting of Menu item [OPERATION SETTING] → [TX GENERAL] → [VOX SELECT]. "MIC": VOX DELAY "DATA": DATA VOX DELAY
	<b>V</b>	<b>D</b>	P1	P1	P1	P1	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>D</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>D</b>	P1	P1	P1	P1	;				

<b>VG</b>		<b>VOX GAIN</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 000 - 100
	<b>V</b>	<b>G</b>	P1	P1	P1	;					
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>G</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>G</b>	P1	P1	P1	;					

<b>VM</b>		<b>MAIN BAND TO MEMORY CHANNEL</b>									
Set	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>M</b>	;			;					
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	

<b>VS</b>		<b>VFO SELECT</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band Operation 1: Sub Band Operation
	<b>V</b>	<b>S</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>S</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>S</b>	P1	;							

<b>VT</b>		<b>VCT (VC TUNE)</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: MAIN Band                    P4 0 ~ 9 1: SUB Band                        P5 0 ~ 255 (VCT Meter) P2 0: OFF                            P6 0: VC TUNE (not installed) 1: ON                                    1: VC TUNE (For available frequency range) 2: Default                            2: VC TUNE (For not available frequency range) P3 + -
	<b>V</b>	<b>T</b>	P1	P2	P3	P4	;				
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>T</b>	P1	;							
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>T</b>	P1	P2	P5	P5	P5	P6	;		

<b>VX</b>		<b>VOX STATUS</b>									
Set	1	2	3	4	5	6	7	8	9	10	P1 0: VOX "OFF" 1: VOX "ON"
	<b>V</b>	<b>X</b>	P1	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>X</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>V</b>	<b>X</b>	P1	;							

# CAT (Computer Aided Transceiver) Operation

<b>XT</b>	<b>TX CLAR</b>										
Set	1	2	3	4	5	6	7	8	9	10	P1 0: TX CLAR "OFF" 1: TX CLAR "ON"
	<b>X</b>	<b>T</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
	<b>X</b>	<b>T</b>	;								
Answer	1	2	3	4	5	6	7	8	9	10	
	<b>X</b>	<b>T</b>	<b>P1</b>	;							

<b>ZI</b>	<b>ZERO IN</b>										
Set	1	2	3	4	5	6	7	8	9	10	(CW AUTO ZERO IN Function) P1 0: MAIN Band 1: SUB Band
	<b>Z</b>	<b>I</b>	<b>P1</b>	;							
Read	1	2	3	4	5	6	7	8	9	10	
Answer	1	2	3	4	5	6	7	8	9	10	





Copyright 2020  
YAESU MUSEN CO., LTD.  
All rights reserved.

No portion of this manual may be  
reproduced without the permission of  
YAESU MUSEN CO., LTD.

**YAESU MUSEN CO., LTD.**

Tennozu Parkside Building  
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

**YAESU USA**

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

**YAESU UK**

Unit 12, Sun Valley Business Park, Winnall Close  
Winchester, Hampshire, SO23 0LB, U.K.