


To change the Region to C2



To enable the 70 MHz (4m) Band on the FT-DX101D/MP first enable the C2 Region, this will also provide 5MHz (60m) coverage from 5.250000 MHz – 5.406050 MHz.

1. Turn the transceiver OFF.
2. Press and hold in the **[FUNC]** and **[MODE]** while turning the transceiver ON.
The green LED indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Momentarily press the **[MODE]** button, and the green LED indicator will now blink with interval of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the **[MODE]** button, and the radio will restart automatically. Once restarted the region will have changed to C2.

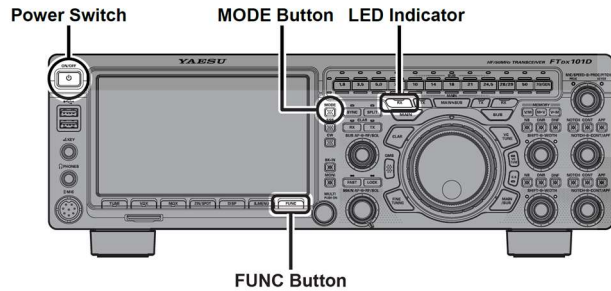


To enable 70 MHz (4m) band for the MAIN receiver


1. Press the **[MAIN]** button.
2. Press the **[70/GEN]** button.
3. Touch on the .000 digits of the main frequency display as shown in the picture.

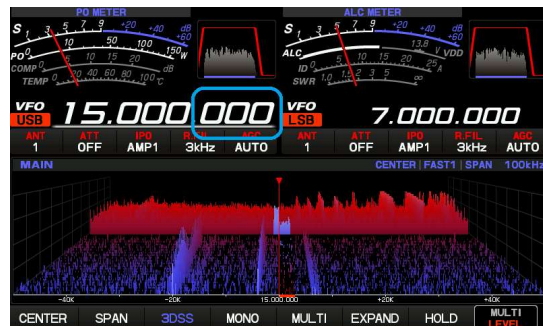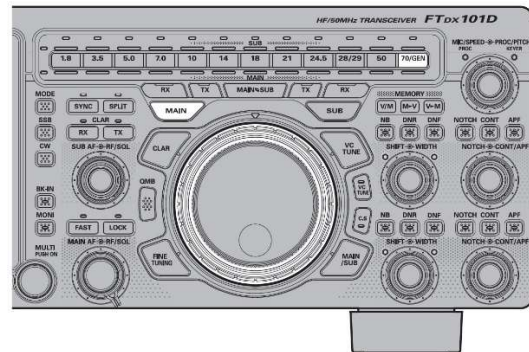


4. The radio is now in frequency entry mode.

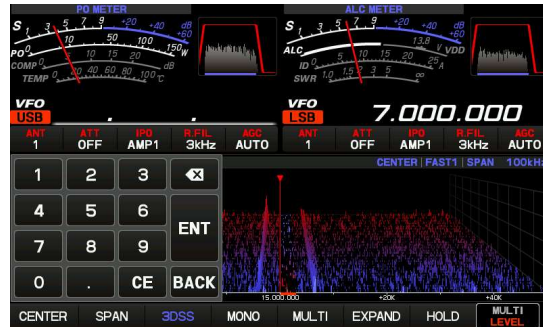

5. Using the touchscreen keypad type 70 and touch ENT.

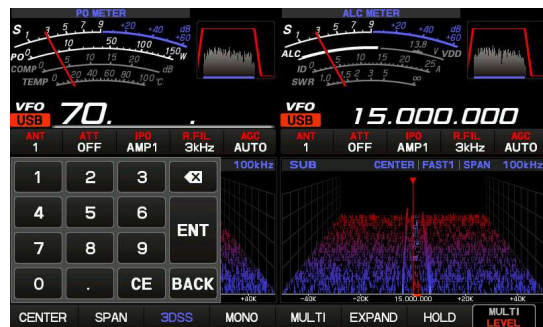


6. The MAIN receiver is now tuned to the 70 MHz (4m).

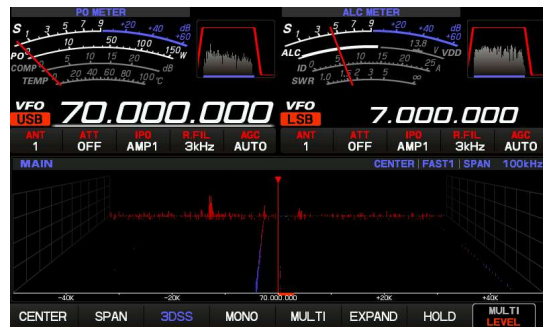


To enable 70 MHz (4m) band for the SUB receiver


1. Press the [SUB] button.
2. Press the [70/GEN] button.

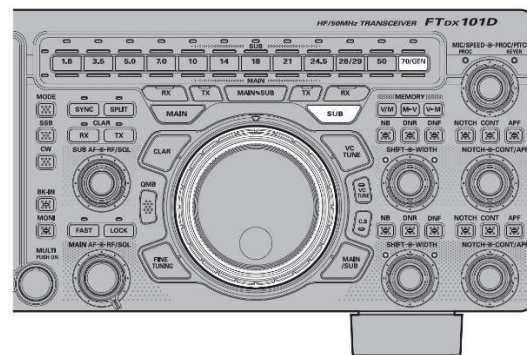


3. Touch on the .000 digits of the sub frequency display as shown in the picture.

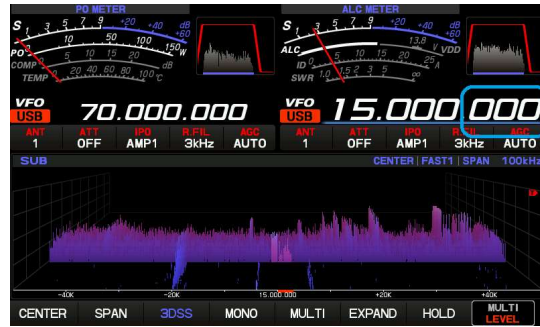

4. The radio is now in frequency entry mode.

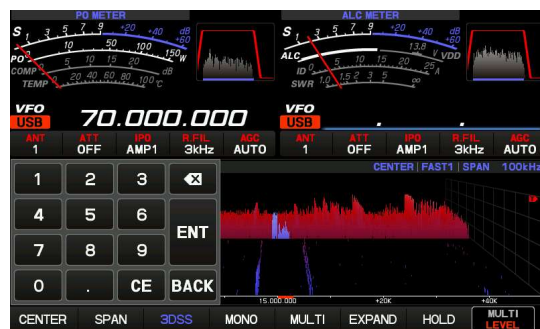

5. Using the touchscreen keypad type 70 and touch ENT.

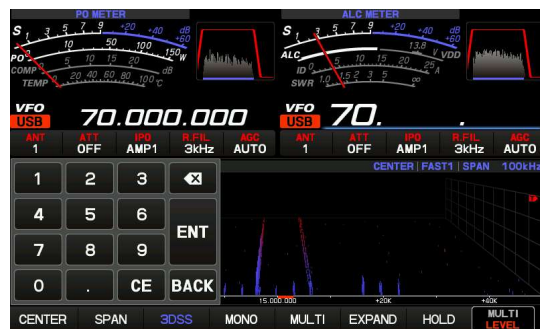

6. The SUB receiver is now tuned to the 70 MHz (4m).

