

**FTdx-3000D DATA AUDIO PC<->RTX with USB cable!**

Look at menus 76 and 77. They control the in and out from the radio.

76 controls the mic gain or the transmit audio to control alc

77 controls the audio out of the radio so you don't over or under drive the software you run.

De HB9oab